

1
5X10M TENT

PARTS

NO.:1 Short Pipe

Quantity 12



NO.:2 Long Pipe

Quantity 27



NO.:3 Pipe as legs

Quantity 8



NO.:4 Pipe as legs

Quantity 4



NO.:5 2 Way joints

Quantity 12



NO.: 6 110° 3 Way Corners

Quantity 4



NO.: 7 110° 4Way Corners

Quantity 8



NO.: 8 140° 3 Way Corners

Quantity 2



NO.: 9 140° 4 Way Corners

Quantity 4



Side Panels

Quantity 4



UV Rate Cover

Quantity 1



ATTACHING COVER TO FRAME

1. Start by lifting one of the frame and inserting legs.
2. Drape cover over frame.
3. Next, lift the other side of the frame and insert remaining legs.


NOTE: NO. 4 pipes should be set at corner to fix the tarp.

4. Hung up the 4 side panels.


NOTE: Loosen the straps on the bottom of the legs when attach the cover.

Adjust as needed after the canopy is assembled.

1. Start by inserting the legs on one side of the frame.


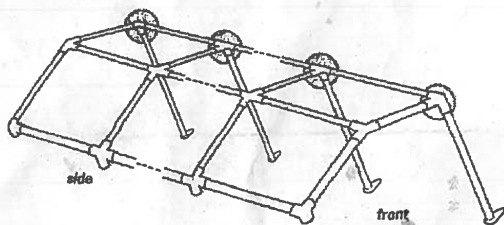


2. Drape canopy over frame.

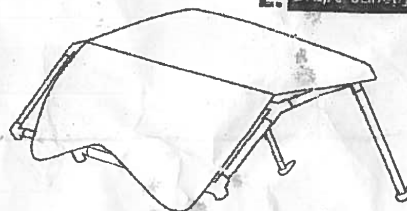

Insert the remaining legs and finish attaching cover to frame.

Then hung up the 4 side panels.

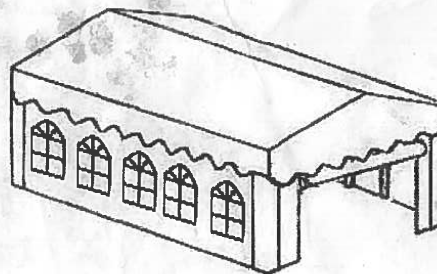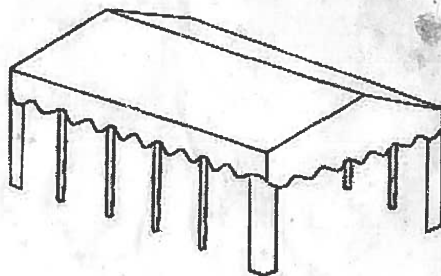


NOTE: USING TIR DOWNS OR PROPER ANCHOR KIT FOR YOUR NEEDS.

FRAME ASSEMBLY

1. Place all corners ,NO.:1 pipes and NO.:2 pipes on the ground as shown.

Push two pipes into the 2 way joints.

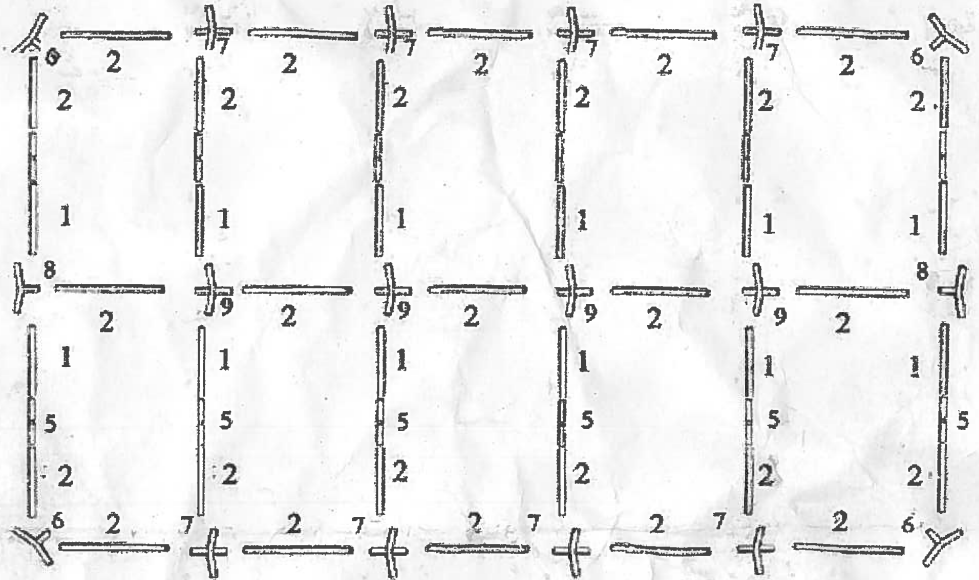

2. Connect pipes together starting with the center frame. Then assemble each side.

